

## CUSTOM TRACK INSTALLATION INSTRUCTIONS


**53202-25 Wall Bracket**  
**53003-25 Ceiling Bracket**

### Wall Bracket

1. To attach bracket to wall first pre-drill holes for screw diameter when mounting into wood frame of window or wall stud. Otherwise, pre-drill and install anchors first before fastening with screws.
2. Next, place the track into the bracket as shown in the drawing below; applying pressure until track “clicks” into bracket.



3. Adjust track laterally.
4. Tighten screw to lock track into place as shown in the drawing below.

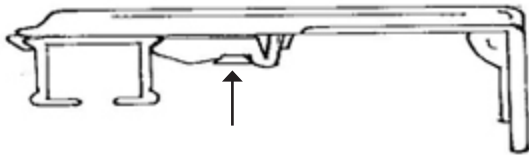

### Ceiling Bracket

1. Place the track into the bracket as shown in the drawing below; applying pressure until track “clicks” into bracket.
2. Attach bracket to ceiling by first pre-drilling holes for screw diameter when mounting into wood frame of window or wall stud. Otherwise, pre-drill and install anchors first before fastening with screws.
3. Tighten screw to lock track into place as shown in the drawing below.

