


VERTICAL SYSTEMS MEASURE INSTRUCTIONS

ORDER IN 5 EASY STEPS

1. Select Mount Type:


Inside:

- Mounted within the window / door frame / wall-to-wall
- Provides a clean, built-in look
- If window frame isn't deep enough please select outside or ceiling mount



Outside / Ceiling:


- Great option when there is not enough depth for an inside mount
- Mounted to the wall or molding surface surrounding the window or directly to the ceiling.
- Creates an illusion of extra height to a room
- No minimum depth requirement

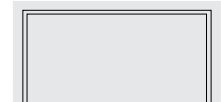

2. Measure:

Inside:


STEP 1: Measure the inside width at 3 locations – the top, middle and bottom. Record the smallest of the 3 measurements. This is your ordering width. We will make the necessary deductions (approx. $\frac{3}{8}$ " – $\frac{1}{2}$ ").

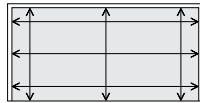

STEP 2: Measure the height at 3 locations – the left side, middle and right side. Record the smallest of the 3 measurements. **We recommend taking 1" off of this measurement to ensure panels are off floor / sill. This is your ordering length and will be the measurement from the top of the track to the bottom of the panels.**

Outside / Ceiling Mount:

STEP 1: Measure the width of the area you wish to cover. For panel systems, and if space allows, we recommend adding a minimum of 6"–12" on each side to help maintain view / light when panels are open. This is your ordering width.

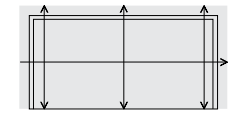

STEP 2: Measure the height of the area you wish to cover. **Your ordering length will be the measurement from the top of the track to the bottom of the panels.**

Please note: We recommend the panels to hang 1" off floor / sill.

3. Select Control Type:

Cord:

- Open and close panels by pulling on cord
- Comes with pulley, which can be secured to wall
- No charge

Baton:

- Open and close panels by using hand drawn baton
- No charge
- Not an option for XL Vertical

4. Select Control Position:

If You Selected Cord Draw:

- This is the side of the system that your control will hang from (left or right)
- Consider any obstacles that may interfere with operation (door handle, window opener, furniture location, etc.)

*At widths over 144", we recommend a split draw with baton controls, due to oversized shipping. Contact customer service for special requests.

If You Selected Baton Control:

- One Way Draw: Single baton will hang on front edge of leading panel
- Split Draw: Two batons will be located in the center, operating each side independently

5. Select Direction to Open:

ONE WAY DRAW: STACK LEFT / DRAW RIGHT	ONE WAY DRAW: STACK RIGHT / DRAW LEFT	SPLIT DRAW
---------------------------------------	---------------------------------------	------------

* If you select baton control, the baton will hang on the opposite end of the direction the panel system will open to. For split draw with baton, the batons will be located in the center, operating each side independently.

Mounting Requirements:

Product	Minimum Depth to Install	Minimum Depth for Flush Mount	Minimum Space for Outside Mount
Panel System	*See Panel System Specifications Sheet for Mounting		2"
XL Vertical	6"	10"	3 1/8"

* See additional measure instructions details on the product page.