




HOW TO MEASURE:

How do you want to hang your Wood Blinds? Inside the window frame? Outside the window frame? There are benefits to each and some important differentiators to learn.

OPTION 1: FOLLOW OUR STEP-BY-STEP INSTRUCTIONS

INSIDE MOUNT

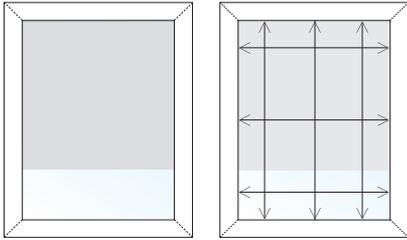

- Mounted inside your window's frame
- Provides a clean built-in look
- Leaves attractive woodwork exposed
- There is a minimum amount of space needed for this mount type. We call this measurement the minimum depth requirements.


STEP 1

Because not all windows are perfect rectangles, we recommend measuring the window in 3 places to get your width: across the top, middle and bottom (see diagram above). Round all measurements to nearest $\frac{1}{8}$ ". Take smallest number. This is your ordering width. We will make the necessary deductions (approx. $\frac{1}{2}$ ").

STEP 2

Finding the length is a similar process, measuring the length of the window in 3 places on the window: left, center and right. Round all measurements to nearest $\frac{1}{8}$ ". Take largest number. This is your ordering length.

OUTSIDE MOUNT

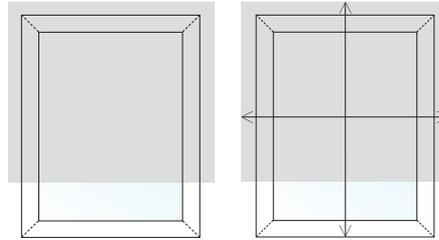

- Mounted outside the window's frame
- Provides a taller, more dramatic appearance
- There is no minimum depth requirements for this mount type, making it a great alternative to inside mount

STEP 1

Measure the width of the area you wish to cover. If space allows we recommend adding 2-3" (1-1 $\frac{1}{2}$ " each side) to this measurement to help eliminate light seepage. This is your ordering width and will be the overall measurement of the blind. (Valance will be approx. 1" wider than blind due to returns.)

STEP 2

Measure the height of the area you wish to cover. This is your ordering length.

OPTION 2: VIEW OUR "HOW TO" VIDEO ONLINE

GO TO: theshadestore.com/measure

OPTION 3: HIRE A PROFESSIONAL TO MEASURE

We have put together a national network of independent measure & install professionals. Simply go online, visit a showroom, or give us a call – and we can match you to a local pro. Once the professional measures, they'll send us a copy of your measurements, and we'll contact you to put your order together. This same professional can also install your window treatments. It's that simple!

GO TO: theshadestore.com/findinstaller
Type in zip code and get matched today!



HOW TO MEASURE CONTINUED:

DEPTH REQUIREMENTS

OPTIONS	HEADRAIL SIZE	Minimum Depth Required For Secure INSIDE MOUNT	Minimum Depth Required For Flush INSIDE MOUNT	Minimum Space Required For OUTSIDE MOUNT
Wood Blind	2¼"	¾"	3"	1¾"
2 on 1 Without Tape	2¼"	¾"	3"	1¾"
2 on 1 With Tape	2¼"	¾"	3"	1¾"
3 on 1 Without Tape	2¼"	¾"	3"	1¾"
3 on 1 With Tape	2¼"	¾"	3"	1¾"
Battery Motor – Tilt Only	2¼"	¾"	3"	1¾"

Workroom Notes:

- *Because Wood Blinds tend to be heavy, we recommend any Wood Blinds over 72"W (60"W for Faux) be ordered as multiple units under one valance.
- **Wood Blinds 9"-12" wide will have tilt in center (no lift available), Wood Blinds less than 18", and Faux Wood Blinds cannot have controls on same side.